# D06FH PRESSURE REDUCING VALVE

## WITH BALANCED HIGH PRESSURE PATTERN

- WRAS approved according to BSEN1567
- The outlet pressure is set by turning the adjustment knob
- The adjustment spring is not in contact with the potable water
- The valve insert is of high quality synthetic material and can be fully exchanged
- Integral fine filter
- · Also available without fittings
- Easily retrofittable to convert valve to a reverse-rinsing filter
- Can be retrofitted with an inlet non-return valve
- Inlet pressure balancing fluctuating inlet pressure does not influence outlet pressure
- · Light weight
- Reliable and proven
- Meets KTW recommendations for potable water

#### **Technical Specification**

#### **Range of Application**

Medium	Water
Inlet pressure	max. 25 bar
Outlet pressure	1.5 - 12 bar (preset to 5 bar)


#### **Technical Data**

Operating temperature	max. 60°C (permanent) max. 70°C (max. operating pressure 10 bar)
Minimum pressure drop	•
Connection size	1/2" - 2"

#### Construction

The pressure reducing valve comprises:

- Housing with pressure gauge connections on both sides
- Threaded male connections (options A & B)
- Valve insert complete with diaphragm and valve seat

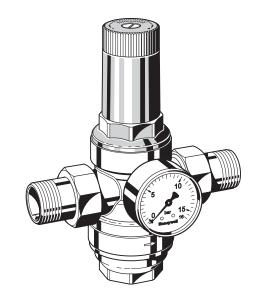

## **APPLICATION**

Pressure reducing valves of this type protect installations against excessive pressure from the supply. They can be used for household, industrial or commercial applications within the range of their specification.

By installing a pressure reducing valve, pressurisation damage is avoided and water consumption is reduced.


The set pressure is also maintained constant, even when there is wide inlet pressure fluctuation.

Reduction of the operating pressure and maintaining it at a constant level minimizes flow noise in the installation.

- Fine filter with 0.16 mm mesh
- Spring bonnet with adjustment knob
- Filter bowl
- Adjustment spring
- Pressure gauge not included (see accessories)



#### **Method of Operation**

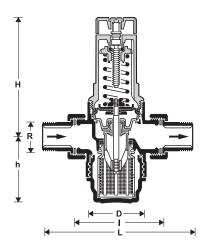

Spring loaded pressure reducing valves operate by means of a force equalising system. The force of a diaphragm operates against the force of an adjustment spring. If the outlet pressure and therefore diaphragm force fall because water is drawn, the then greater force of the spring causes the valve to open. The outlet pressure then increases until the forces between the diaphragm and the spring are equal again.

The inlet pressure has no influence in either opening or closing of the valve. Because of this, inlet pressure fluctuation does not influence the outlet pressure, thus providing inlet pressure balancing.

## **Materials**


- Dezincification resistant brass housing
- Brass threaded connections
- High-quality synthetic material valve insert
- Stainless steel fine filter mesh
- High-quality synthetic material spring bonnet with adjustment knob and setting scale
- Brass filter bowl
- Spring steel adjustment spring
- Fibre-reinforced NBR diaphragm
- NBR and EPDM seals

#### **Options**

Brass filter bowl up to 70 °C
Special Versions available on request Connection size

Connection size	R	1/2"	3/4"	1"	1 <sup>1</sup> / <sub>4</sub> "		2"
Nominal size	DN	15	20	25	32	40	50
diameter							
Weight	ca. kg	0.8	1.0	2.2	2.4	3.4	5.1
Dimensions	mm						
	L	140	160	180	200	225	255
	l	80	90	100	105	130	140
	Н	96	96	140	140	172	172
	h	56	56	77	77	113	113
	D	54	54	72	72	82	82
k <sub>vs</sub> -value		2.4	3.1	7.6	9.1	12.6	12.0

## **Accessories**

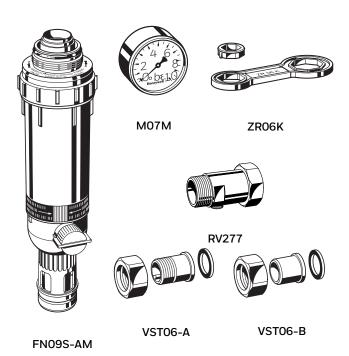

#### FN09S-AM HABEDO ® Retrofit filter

Reverse-rinsing filter with red bronze filter cup for retro-conversion of a pressure reducing valves to a filter combination unit

#### M07M Pressure gauge

Housing diameter 63 mm, rear connection thread

 $G^{1}/4$ ". Ranges: 0 - 4, 0 - 10, 0 - 16 or 0 - 25 bar. Please indicate upper value of pressure range when ordering

#### ZR06K Double ring wrench

For removal of spring bonnet and filter bowl

#### RV277 Inlet check valve

Available in sizes  $R^{1/2}$ " - 2"


#### **VST06-A Connection set**

Threaded connections

#### **VST06-B Connection set**

Solder connections

# **Accessories**

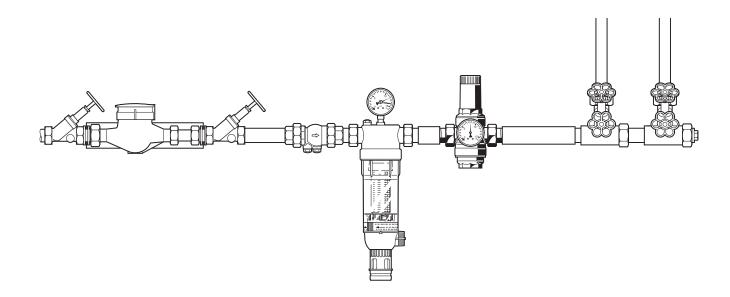

Connection size	R	1/2"	3/4"	1"	1 <sup>1</sup> / <sub>4</sub> "	11/2"	2"
	DN	15	20	25	32	40	50
W*	mm	55	55	60	60	70	70
* Minimum distance from wall to centre line of pipework							

## **Installation Guidelines**

- Install in horizontal pipework with filter bowl downwards.
- Install shutoff valves
- The installation location should be protected against frost and be easily accessible
  - o Pressure gauge can be read off easily
  - o Simplified maintenance and cleaning
- Install downstream of the filter or strainer
  - o This position ensures optimum protection for the pressure reducing valve against dirt


# **Typical Applications**

Pressure reducing valves of this type are suitable for household, industrial and commercial applications within the range of their specifications.

Pressure reducing valves should be installed:

- If the static pressure exceeds the maximum permissible value for the system
- If several pressure zones are required when a pressurisation system is used (pressure reducers on each storey of a building)
- If pressure fluctuations in the downstream system must be avoided


# **Flow Diagram**

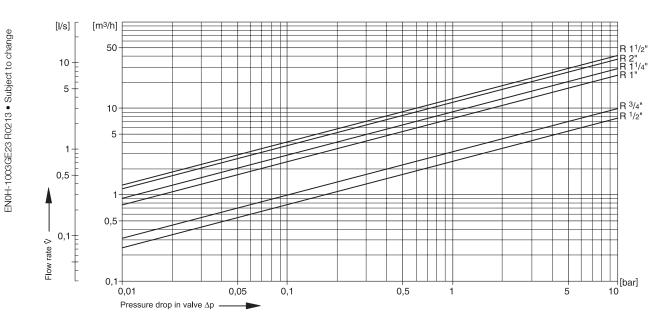

http://ecc.emea.honeywell.com

# **Spare Parts**

Pressure Reducing Valve D06FH, from 1997 onwards

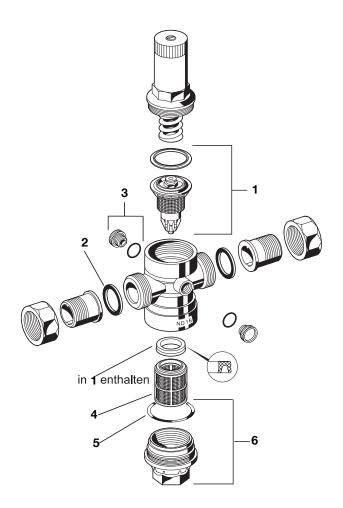

No	. Description	Dimension	Part No.
1	Valve insert complete (without filter)	<sup>1</sup> /2" + <sup>3</sup> /4" 1" + 1 <sup>1</sup> /4" 1 <sup>1</sup> /2" + 2"	D06FA-1/2 D06FA-1A D06FA-11/2
2	Union seal washer (10 pcs.)	1/2" 3/4" 1" 1 <sup>1</sup> /4" 1 <sup>1</sup> /2" 2"	0901443 0901444 0901445 0901446 0901447 0901448
3	Blanking plug with O-ring R1/4" (5 pcs.)		S06K-1/4
4	Replacement filter insert	1/2" + 3/4" 1" + 1 <sup>1</sup> /4" 1 <sup>1</sup> /2" + 2"	ES06F-1/2A ES06F-1A ES06F-11/2A
5	O-ring (10 pcs.)	1/2" + 3/4" 1" + 1 <sup>1</sup> /4" 1 <sup>1</sup> /2" + 2"	0901246 0901247 0901248
6	Brass filter bowl with O-ring	1/2" + 3/4" 1" + 1 <sup>1</sup> /4" 1 <sup>1</sup> /2" + 2"	SM06T-1/2 SM06T-1A SM06T-11/2

#### For more information,

https://honeywellbuildings.in Call: 1-800-103-0339 Email: HBT-Indiabuildings@honeywell.com

Honeywell HBT India Buildings

Unitech Trade Center, 5th Floor, Sector-43, Block C, Sushant Lok Phase - I, Gurgaon - 122 002

