

# **HERZ-Regulating valve 4001**

# Flow rate controller

Data sheet 4001, Issue 0516

# Dimensions in mm

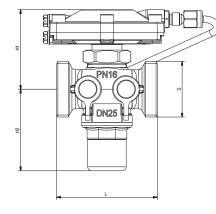

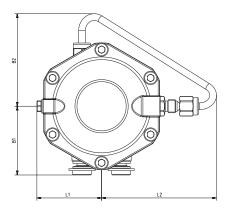

	DN	G	L	H1	H2	B1	B2	L1	L2
1 <b>4001</b> 21	15	3/4 G	66	59	61,5	49	63	48	81
1 <b>4001</b> 22	20	1 G	76	60	61,5	51	68,5	48	85
1 <b>4001</b> 23	25	1 1/4 flatsealing	76	60	61,5	51	68,5	48	85
1 <b>4001</b> 24	32	1½ flatsealing	114	76	79	76	47	57	89
1 <b>4001</b> 25	40	1¾ flatsealing	132	86	90	75	47	70	81
1 <b>4001</b> 26	50	2¾ flatsealing	140	86	90	75	47	70	81

# 🖾 Technical data

max. operating pressure max. differencial pressure on the body min. operating temperature min. operating temperature max. operating temperature

16 bar 4 bar 2 °C (pure water) - 20 °C (frost protection) up to **DN 32** 130 °C from **DN 40** 110 °C

# Application

The Pressure Independent Balancing Valve (PIBV) is used in all heating and cooling systems with circulation pumps. The valve automatically maintains flow to the required part of the system at the set rate by measuring and immediately adjusting to any variation in pressure. No additional measurements are necessary and the correct flow rate is achieved at all operating conditions. The diaphragm responds to the pressure upstream and downstream of the regulating valve (via an internal impulse line). The valve settings directly affect the volumetric flow through the valve. It is thus possible to set the maximum flow rate based on the flow chart when the valve is fitted. This allows for the balancing of heating circuits, cooling water systems, ceiling cooling and heating panels, air heaters, etc. without any need to first assess the pressure variations in the system. In addition to the PIBV, HERZ Ball Valves (2190) can be fitted in the corresponding flow pipe. If control measurements of the flow rate are required, then STRÖMAX-M valves (4017 M, 4117 M, 4217 GM) must be fitted instead.

# 🛛 Materials

Body:dezincification-resistant brassMembranes and O-rings:EPDMWater purity in accordance with the ÖNORM H 5195 and VDI 2035 standardsEthylene and propylene glycol can be mixed to a ratio of 25 - 50 vol. [%].






# Installation

The PIBV is fitted in the return in any orientation. The arrow on the valve body should align with the direction of flow.

It is recommended that an isolation valve is fitted both upstream and downstream of the PIBV.

The PIBV may be isolated using the HERZ pre-setting key (1 4006 02).

For pre-setting, turn the key right (clockwise) up to the stop. The setting should then read < 0%.

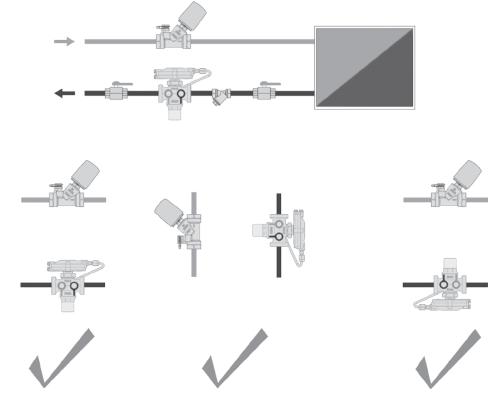

#### 🛛 kvs-values

DN 15	0,4 m³/h	DN 32	2,5 m³/h
DN 20	0,9 m³/h	DN 40	5 m³/h
DN 25	1,9 m³/h	DN 50	5 m³/h

#### Accessories and spare parts

	7217	HERZ-Motorised	balancing valve,	angle version
--	------	----------------	------------------	---------------

- 4117 HERZ-STRÖMAX circuit control valves, angle version
- 4217 HERZ-STRÖMAX circuit control valves, straight version
- 4017 HERZ-STRÖMAX circuit control valves with integrated metering orifice plate
- 4125 HERZ shut-off valves, angle version
- 4115 HERZ shut-off valves, angle version
- 4215 HERZ shut-off valves, straight version, also variants with male threads. For details please refer to the corresponding data sheets.
- 1 **0284** 01 test point for HERZ circuit control valve, blue cap (return)
- 1 **0284** 02 test point for HERZ circuit control valve, red cap (flow)
- 1 0284 11 test point for HERZ circuit control valve, extended model, blue cap (return)
- 1 0284 12 test point for HERZ circuit control valve, extended model, red cap (flow)
- 1 **0284** 21 HERZ test point with draining function, blue cap (return)
- 1 **0284** 22 HERZ test point with draining function, red cap (flow)
- 1 0284 00 test point adapter set
- 1 **7708** ... HERZ actuating drive for two-point or pulse control
- 1 **7990** .. HERZ actuating drive for continuous control
- 1 **0273** 09 screw plug 1/4
- 1 4006 02 HERZ pre-setting key for flow rate controller

# Pipe connections (with cone seal) for metal pipes

Pipe		8	10	12	14	15	16	18	22
Valve		DN 15	DN 20						
Nut G		3/4	3/4	3/4	3/4	3/4	3/4	3/4	1
Connection	with metallic seal	1 <b>6274</b> 18	1 <b>6274</b> 00	1 <b>6274</b> 01	1 <b>6274</b> 02	1 <b>6274</b> 03	1 <b>6274</b> 04	_	1 <b>6273</b> 01
Connection	with soft seal	-	_	1 <b>6276</b> 12	1 <b>6276</b> 14	1 <b>6276</b> 15	1 <b>6276</b> 16	1 <b>6276</b> 18	_

Compression union for calibrated soft steel and copper pipes (for details please refer to the corresponding data sheets)

# Pipe connections (with cone seal) for plastic pipes

Pipe	10 x 1,3	14 x 2	15 x 2,5	16 x 2	16 x 2,2	17 x 2	17 x 2,5	18 x 2,5	18 x 2
Valve	DN 15								
Nut G	3/4	3/4	3/4	3/4	3/4	3/4	3/4	_	1
Connection	1 <b>6098</b> 18	1 <b>6098</b> 02	1 <b>6098</b> 16	1 <b>6098</b> 03	1 <b>6098</b> 12	1 <b>6098</b> 04	1 <b>6098</b> 05	1 <b>6098</b> 06	1 <b>6098</b> 07

Pipe	20 x 2	20 x 3,5	20 x 2,5	25 x 3,5	26 x 3
Valve	DN 15				
Nut G	3/4	3/4	3/4	1	1
Connection	1 <b>6098</b> 08	1 <b>6098</b> 10	1 <b>6098</b> 11	1 <b>6198</b> 00	1 <b>6198</b> 01
Valve	DN 15				
Nut G	1				
Connection	1 <b>6198</b> 12				

Plastic pipe connections for PE-X, PB and aluminium composite pipes (for details please refer to the corresponding data sheets)


When installing soft steel or copper pipes with a pipe wall of 1 mm or less with compression unions, we recommend the use of support sleeves (order no.: 1 0674 xx). When installing plastic pipes, suitable calibration tools are needed. Please refer to our instruction manual. For proper installation use silicone oil to lubricate the thread of the locking nut or olive screw as well as the olive.

# Connection elements

- 1 6220 .. Iron pipe connection, consisting of nut, seal and pipe nipple with male pipe thread
- 1 6236 ... Soldering connection, consisting of nut, seal and soldering nipple
- 1 6240 .. Welding connection, consisting of nut, seal and welding nipple
- 1 6210 .. Iron pipe connection consisting of nut, seal and pipe nipple with male pipe thread
- 1 6235 ... Soldering connection, consisting of nut, seal and soldering nipple



# HERZ-Connection elements

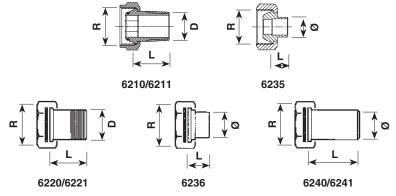

Valve dimension	Order number	R	D	Ø	L
DN 15	1 <b>6210</b> 21	3/4	1/2	-	25
DN 15	1 <b>6210</b> 26	3/4	1/2	_	21
DN 15	1 <b>6210</b> 11	3/4	1/2	—	30
DN 15	1 <b>6211</b> 00	3/4	3/8	—	24
DN 20	1 <b>6210</b> 02	1	3/4	_	30
DN 20	1 <b>6210</b> 12	1	1/2	—	30
DN 25	1 <b>6220</b> 63	11⁄4	1	—	35
DN 32	1 <b>6220</b> 64	1½	1	-	40
DN 40	1 <b>6220</b> 65	1¾	1½	—	49
DN 50	1 <b>6220</b> 66	23⁄8	2	-	56
DN 15	1 <b>6235</b> 21	3/4	-	12	13
DN 15	1 <b>6235</b> 31	3/4	_	15	13
DN 15	1 <b>6235</b> 41	3/4	-	18	18
DN 20	1 <b>6235</b> 12	1	-	18	18
DN 25	1 <b>6236</b> 63	11⁄4	-	28	24
DN 32	1 <b>6236</b> 64	1½	-	35	27
DN 40	1 <b>6236</b> 65	1¾	-	42	31
DN 50	1 <b>6236</b> 66	23⁄8	-	54	37
DN 25	1 <b>6240</b> 63	11/4	-	34	51
DN 32	1 <b>6240</b> 64	1½	-	42	54
DN 40	1 <b>6240</b> 65	<b>1</b> <sup>3</sup> ⁄4	_	48	57
DN 50	1 <b>6240</b> 66	2¾	_	60	60



Valve dimension	Order number	Α	В	L
DN 15	P <b>7014</b> 81	G 3/4	14 x 2	50
DN 15	P <b>7016</b> 81	G 3/4	16 x 2	50
DN 15	P <b>7018</b> 81	G 3/4	18 x 2	50
DN 15	P <b>7020</b> 81	G 3/4	20 x 2	50
DN 25	P <b>7026</b> 43	G 1¼	26 x 3	50
DN 25	P <b>7032</b> 43	G 1¼	32 x 3	50
DN 25	P <b>7040</b> 43	G 1¼	40 x 3,5	70
DN 32	P <b>7032</b> 44	G 1½	32 x 3	50
DN 32	P <b>7040</b> 44	G 1½	40 x 3,5	70
DN 32	P <b>7050</b> 44	G 1½	50 x 4	70



# 🖸 Tips

The valves must be installed for the correct application using clean fittings. A HERZ strainer (4111) should be fitted to prevent impurities.

#### 🛛 Test points

Two test points are fitted on the same side of the valve and factory sealed. Thanks to this arrangement they are easily accessible and measurement devices can be quickly fitted, no matter in what position the valve has been installed.


#### Pre-setting




The valve setting is clearly shown in percent. The preset value can be easily adjusted. The preset PIBV can be isolated at any time or adjusted to the required flow rate.

# Application examples




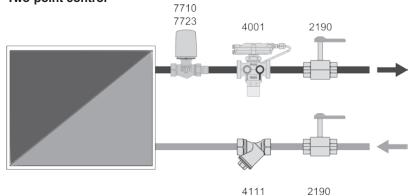

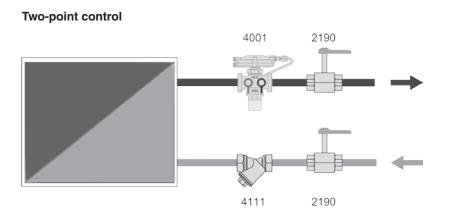





# **Two-point control**

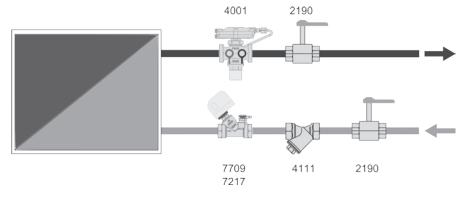


**Two-point control** 

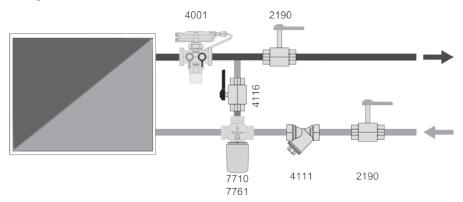


Please note: all diagrams are indicative in nature and do not claim to be complete. All specifications and statements within this brochure are according to information available at the time of printing and meant for informational purpose only. Herz Armaturen reserves the right to modify and change products as well as its technical specifications and/or it functioning according to technological progress and requirements. It is understood that all images of Herz products are symbolic representations and therefore may visually differ from the actual product. Colours may differ due to printing technology used. In case of any further questions don't hesitate to contact your closest HERZ Branch-office.

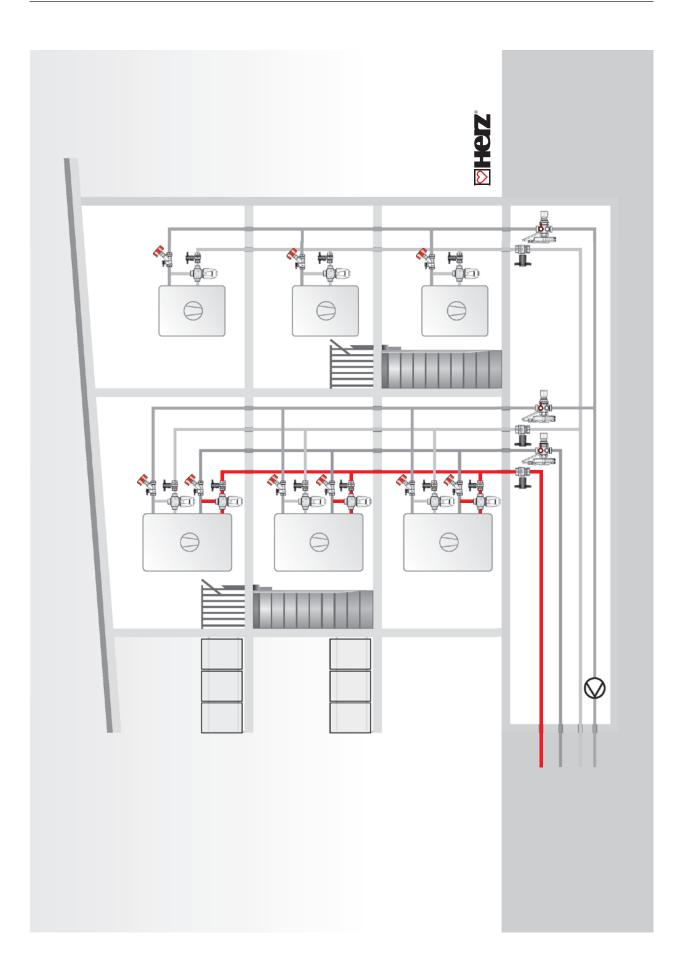

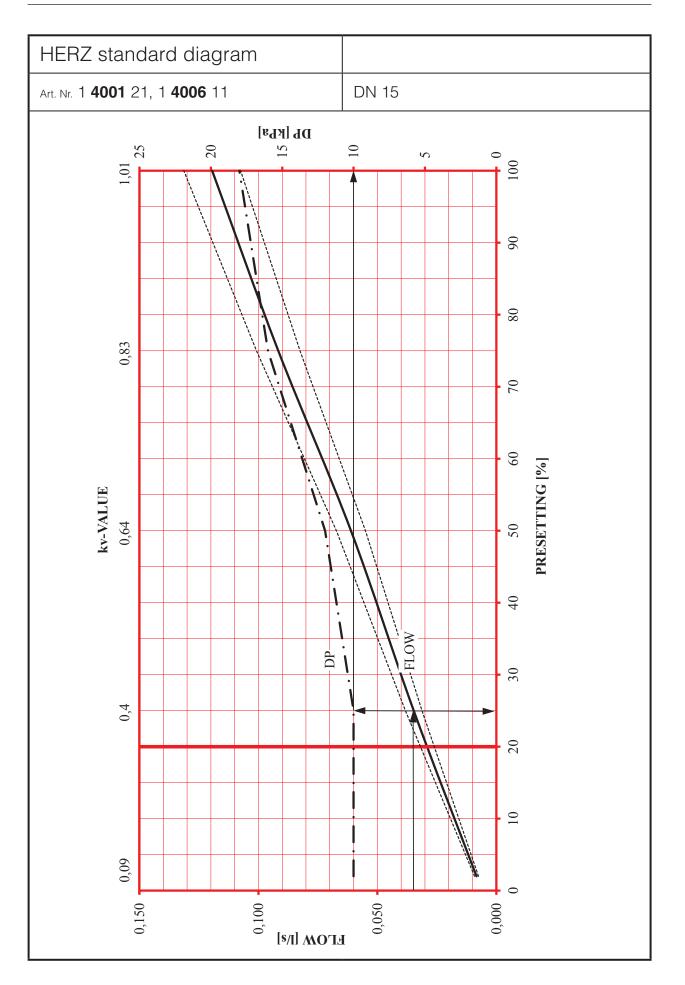


HERZ standard diagram Art. Nr. 1 4001 22, 1 4006 12 DN 20 DP [kPa] 50 40 20 1030 0 100 $\sim$ ۱ ÷-\ \ \ \ 90 Ϊ ļ ۱ 80 ١ 1,72١ 70 ĺ 1 ١ 60 **PRESETTING[%]** ١ kv-VALUE ١ 1,2550 I ٠ l DP 40 I FLOW 30 t 0,78 20 10۱ 0,130 0,1000,1500,2500,2000,050 0,000 0,300 [\$/] MOTH



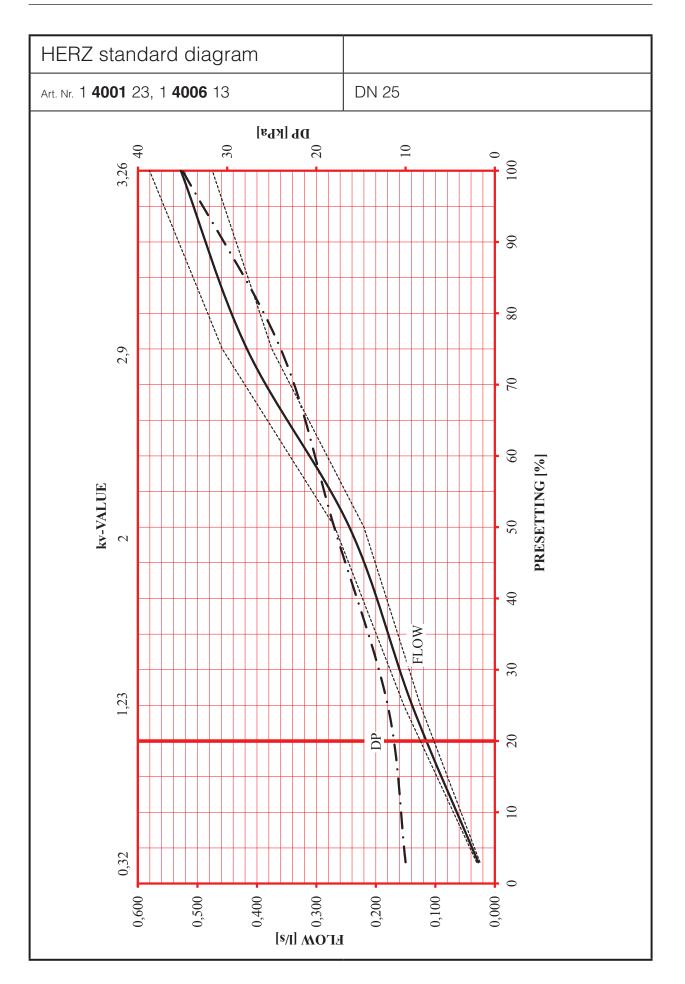

HERZ standard diagram Art. Nr. 1 4001 24, 1 4006 14 DN 32 DP [kPa] 15 1025 20 Ś 0 1005,59 90 80 4,54 ŀ 70 ١ ١ 60 **PRESETTING** [%] ١ kv-VALUE ١ 2,94 50 ١ 40 ١ t 30 FLOW ł DP 1, 7920 ١ • 1 10 0,490 0,5000,700 0,6000,4000,000 0,8000,3000,2000,100[\$/I] MOTH



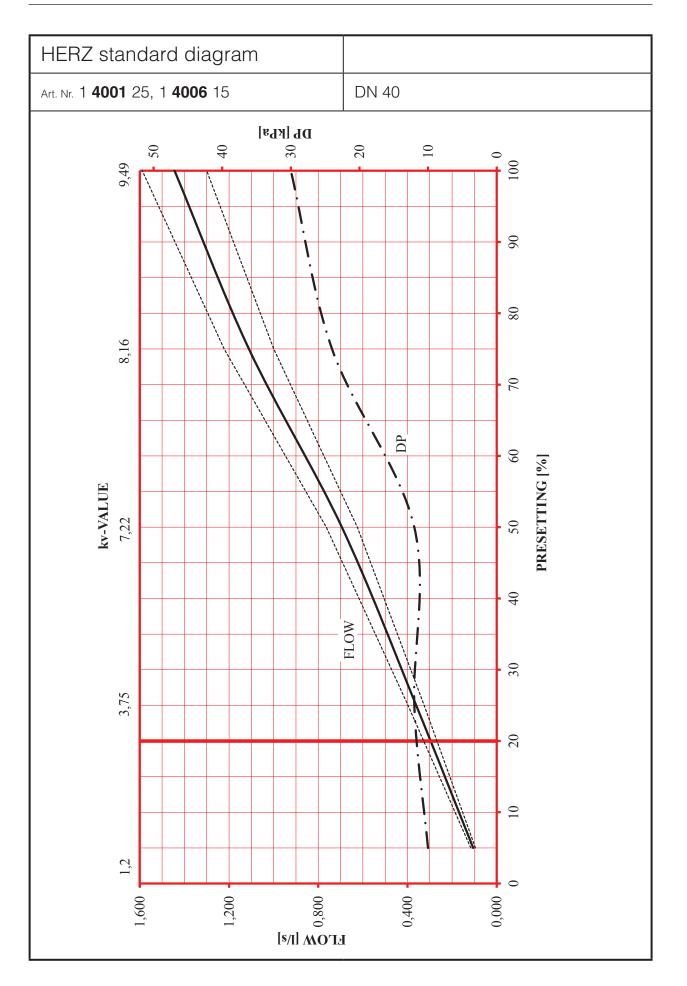

HERZ standard diagram Art. Nr. 1 4001 26, 1 4006 16 DN 50 DP [kPa] 40 30 20 1050 0 1009,1790 ٠ ١ 80 • ١ 7,25 ١ 70 ١ ١ DP 60 **PRESETTING** [%] V kv-VALUE ١ 5,72 50 ۱ FLOW 40 30 3,3 • 20 L • ł 10• ١ 0,980 1,0001,5000,500 0,000 [\$/I] MOTH